

 
INT



SAFETY SWITCH

Safety start-stop switch.
Useful for stopping the fan before any maintenance job.
Suited for direct control of motor in AC 3 operation category
According to the IEC 947-3 standard.
IP-65 protection.

Fans

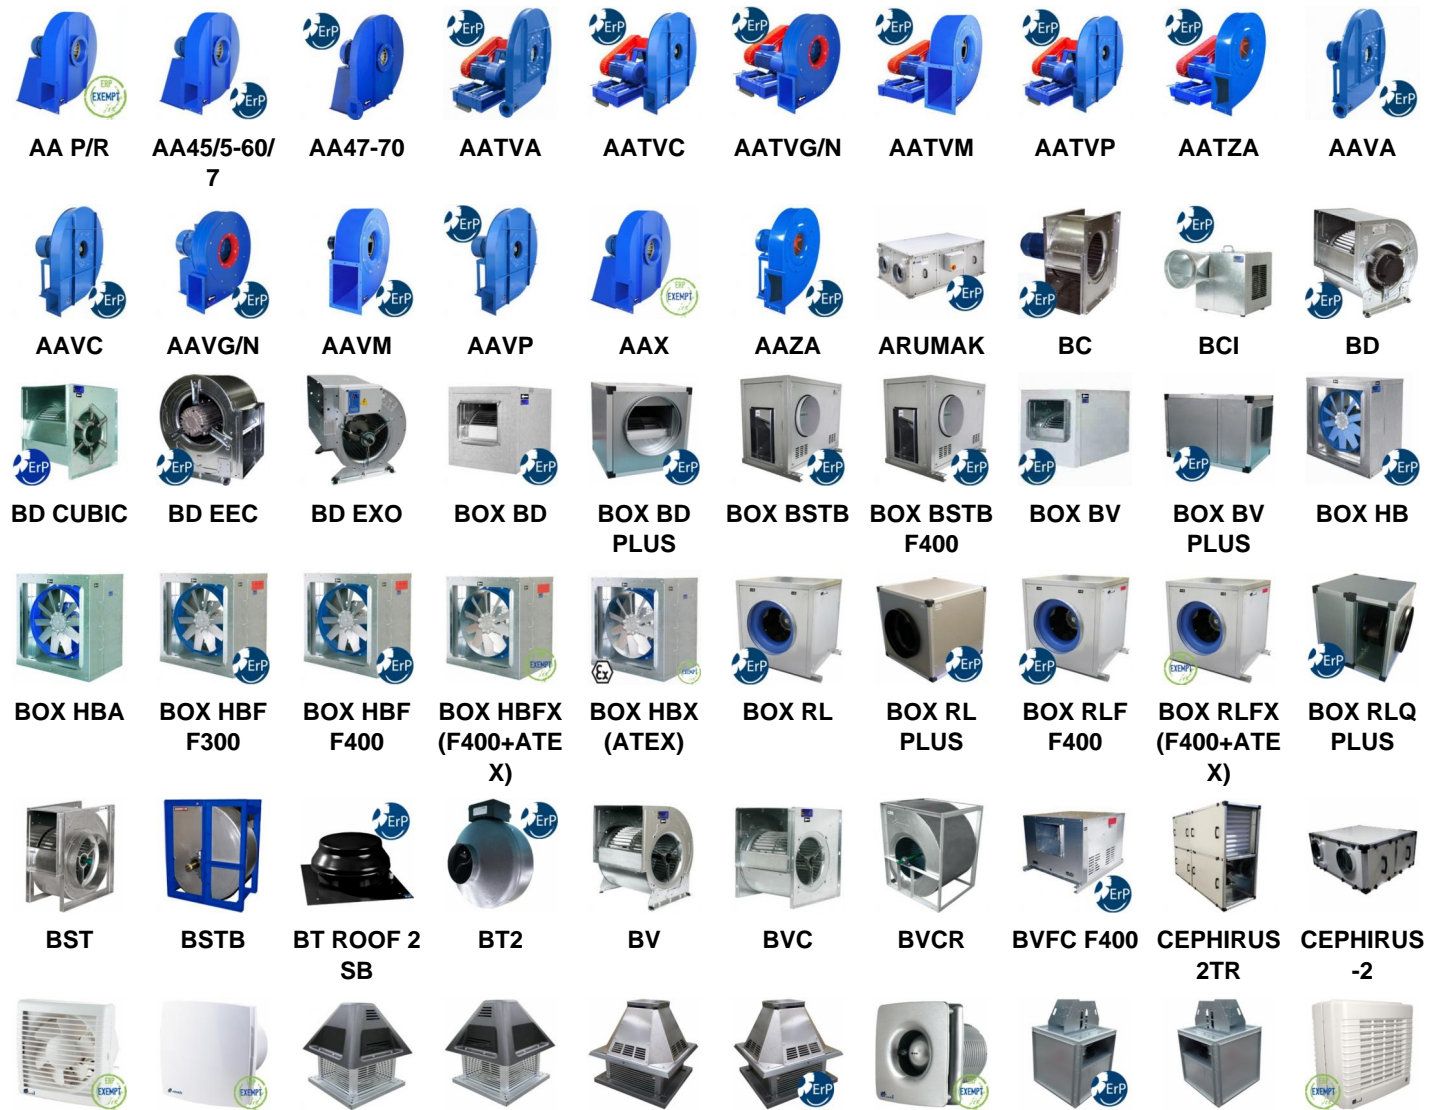


 CHRYSAM REV	 CICONUS	 CTH3	 CTH3 F400	 CTH3-A	 CTH3-A F400	 CYCNUS	 DHUMAT	 DHUMAT F400	 FENESO
HB	HBA	HB F300	HB F400	HBFX (F400+ATEX X)	HBX (ATEX)	HC	HCA	HCF F300	HCF F400
 HCFX (F400+ATEX X)	 HCX (ATEX)	 HH	 HHP	 HHX	 HI	 HJB	 HJBM	 HJBM EEC	 HJBM PLUS
 HJBMX	 HJEM	 HM	 HMF F300	 HMF F300 2P	 HMF F400 2P	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL
 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL	 HMF F400 DUAL



**TWIN BOX
BD**



 **TWIN BOX
BV**




VULCAN

Technical data

Code	Model	Max.I. (A)	Connect. diagram
FX025955	INT 13 1V	14	1
FX025961	INT 13 2V	14	2
FX025956	INT 15 1V	18	1
FX025962	INT 15 2V	18	2
FX025957	INT 30 1V	35	1
FX025963	INT 30 2V	35	2
FX025958	INT 45 1V	70	1
FX025964	INT 45 2V	70	2
FX452508	INT 6,5 1V	11	1
FX452516	INT 6,5 2V	11	2

 Dimensions

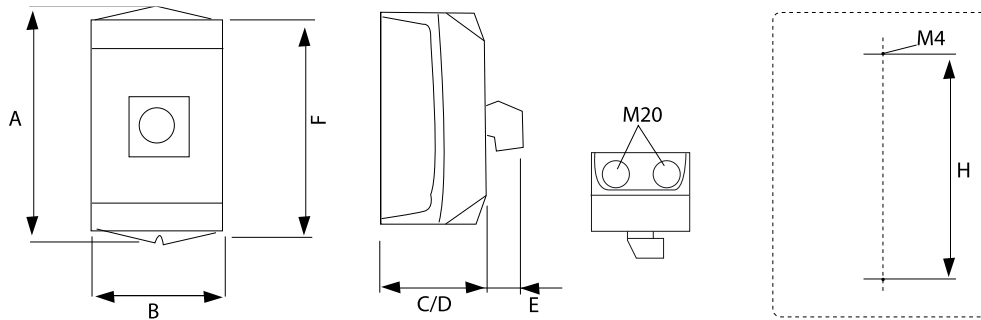

Model	A	B	C	D	E	F	H	M
INT 13 1V	137	80	75	90	27	120	127	M20
INT 13 2V	137	80	75	90	27	120	127	M20
INT 15 1V	137	80	75	90	27	120	127	M20
INT 15 2V	137	80	75	90	27	120	127	M20
INT 30 1V	137	80	75	90	27	120	127	M20
INT 30 2V	137	80	75	90	27	120	127	M20
INT 45 1V	137	80	75	90	27	120	127	M20
INT 45 2V	137	80	75	90	27	120	127	M20
INT 6,5 1V	137	80	75	90	27	120	127	M20
INT 6,5 2V	137	80	75	90	27	120	127	M20

Wiring diagram

DIAGRAM Nº 1

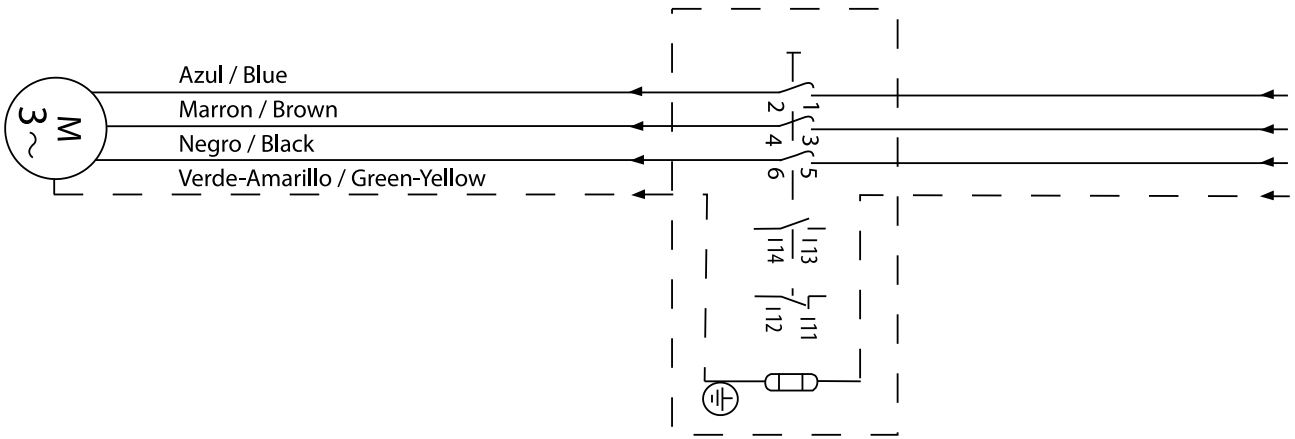 


DIAGRAM Nº 2

